

Stellar RIC Activation



Your new Stellar RIC hearing aids have arrived in a sleep mode and will need to be activated.

To activate Your new Stellar RIC for the first time please follow these steps:

1. Plug the inductive charger into a power supply.
2. Confirm one green LED for the center slot which indicates the charger has power and ready for use.
3. Put the hearing instruments with attached receiver in the charging slots.
4. Wait until you see the "Charge status" change to at least a single orange light.
5. You can now remove your new Stellar RIC for programming.

| LED | Charging status |
|-----|--|
| | Single orange LED: Charging status 0 - 33 % |
| | Two orange LEDs: Charging status 34 % - 66 % |
| | Three orange LEDs: Charging status 67 % - 99 % |
| | Three green LEDs: Hearing instrument is fully charged. |

Copyright © 2018 Rexton. All rights reserved.
RX18716 Rev. 12/18 PN 10538974 2.0

Stellar RIC Activation



Your new Stellar RIC hearing aids have arrived in a sleep mode and will need to be activated.

To activate Your new Stellar RIC for the first time please follow these steps:

1. Plug the inductive charger into a power supply.
2. Confirm one green LED for the center slot which indicates the charger has power and ready for use.
3. Put the hearing instruments with attached receiver in the charging slots.
4. Wait until you see the "Charge status" change to at least a single orange light.
5. You can now remove your new Stellar RIC for programming.

| LED | Charging status |
|-----|--|
| | Single orange LED: Charging status 0 - 33 % |
| | Two orange LEDs: Charging status 34 % - 66 % |
| | Three orange LEDs: Charging status 67 % - 99 % |
| | Three green LEDs: Hearing instrument is fully charged. |

Copyright © 2018 Rexton. All rights reserved.
RX18716 Rev. 12/18 PN 10538974 2.0

Stellar RIC Activation



Your new Stellar RIC hearing aids have arrived in a sleep mode and will need to be activated.

To activate Your new Stellar RIC for the first time please follow these steps:

1. Plug the inductive charger into a power supply.
2. Confirm one green LED for the center slot which indicates the charger has power and ready for use.
3. Put the hearing instruments with attached receiver in the charging slots.
4. Wait until you see the "Charge status" change to at least a single orange light.
5. You can now remove your new Stellar RIC for programming.

| LED | Charging status |
|-----|--|
| | Single orange LED: Charging status 0 - 33 % |
| | Two orange LEDs: Charging status 34 % - 66 % |
| | Three orange LEDs: Charging status 67 % - 99 % |
| | Three green LEDs: Hearing instrument is fully charged. |

Copyright © 2018 Rexton. All rights reserved.
RX18716 Rev. 12/18 PN 10538974 2.0

Stellar RIC Activation



Your new Stellar RIC hearing aids have arrived in a sleep mode and will need to be activated.

To activate Your new Stellar RIC for the first time please follow these steps:

1. Plug the inductive charger into a power supply.
2. Confirm one green LED for the center slot which indicates the charger has power and ready for use.
3. Put the hearing instruments with attached receiver in the charging slots.
4. Wait until you see the "Charge status" change to at least a single orange light.
5. You can now remove your new Stellar RIC for programming.

| LED | Charging status |
|-----|--|
| | Single orange LED: Charging status 0 - 33 % |
| | Two orange LEDs: Charging status 34 % - 66 % |
| | Three orange LEDs: Charging status 67 % - 99 % |
| | Three green LEDs: Hearing instrument is fully charged. |

Copyright © 2018 Rexton. All rights reserved.
RX18716 Rev. 12/18 PN 10538974 2.0